

**FEATURES:**

- Flexure suspension allows stiction free motion of the mirror with an infinite fatigue lifetime
- Built in optical sensor allows the user to monitor both axes of mirror motion
- Moving magnet design allows coils to be heat sunk to the mirror base structure
- New coil design eliminates coil overheating problems, no need to monitor coil temperature
- Mirror coating to customer requirements
- Wave-front quality 1/4th wave rms
  - Substrate 1/4<sup>th</sup> wave p-v
- Useable aperture 3.0”

Model OIM3300 features a 3" aluminum mirror substrate. Standard coating protected gold, silver or aluminum.

A built in high precision optical sensor monitors mirror angle. The compact optical head is attached to a servo controller using a supplied 10 foot cable. The user inputs analog mirror command to the controller to steer the mirror.



## Mirror Specifications

Specification	Typical	Units
<b>Dynamic Performance</b>		
Mirror Angular Range (mechanical)	+/- 5.0	degrees
Angular resolution	<2	urads
3dB Bandwidth	> 250	Hz
Linearity	1%	% Full Scale
Step Response (1 mrad step)	<5	ms
<b>Mirror Substrate</b>		
Material	6061-T6 Aluminum	
Mirror substrate size	3.0	inches
Coating	Protected Gold, Silver, or Aluminum	
Reflectivity	Depends on coating	
Wavefront quality	$\lambda/4$ @ 633nm	waves rms
Clear Aperture	3.0	inches
<b>Electrical</b>		
Peak power	30	Watts
<b>Mechanical</b>		
Mirror head size	4.5 X 3.67 X 2.75	inches
Weight no foot	19.4	oz
Controller size	2.0 X 4.0 X 6.1	inches
Weight	21	oz
Cable from Head to Controller 6 foot	10	oz

### Pricing

Complete mirror system  
(mirror head, controller, cables, and power supply)

Includes:

Fast Steering Mirror Head  
Protected gold, silver, or aluminum mirror substrate  
Analog Servo Controller  
10 foot cable FSM to Controller  
Table top power supply

OIM3300      \$12,000

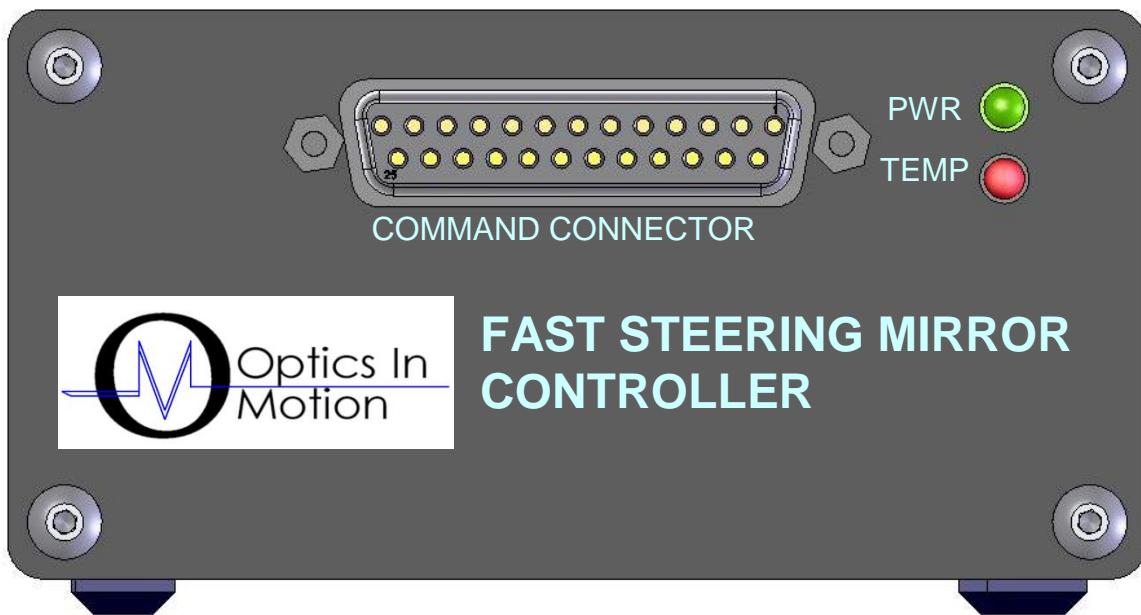


Figure 1: Controller Front View


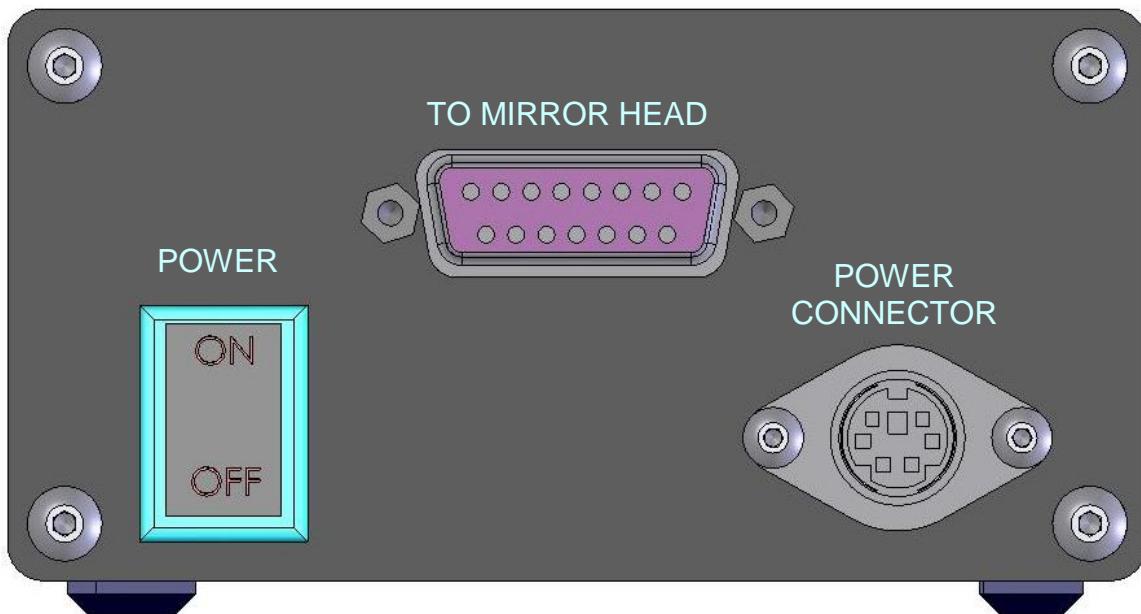


Figure 2: Controller Rear View

# Command Connector Wiring Table

25-Socket Sub-miniature D Connector

<b>Pin Number</b>	<b>Signal Name</b>	<b>I/O Type</b>	<b>Description</b>
1	X ERROR	Output	X summing junction error voltage output, difference between commanded and actual position. (referenced to ground)
2	INT/EXT SWITCH	Input	Normally low TTL input. High level switches the position feedback input from local to external. (used with input pins 10,11 and 17, 5)
3	X- COMMAND	Input	X mirror position command. Low side of differential command input. Range +/-10 Volts.
4	X+ COMMAND	Input	X mirror position command. High side of differential command input. Range +/-10 Volts.
5	X- EXTERNAL	Input	X external mirror position. Low side of differential position input (from external quad or similar position sensor)
6	GND	Output	Ground Reference
7	-15 VOLTS	Output	-15 VDC for external loads of less than 100ma.
8	RESERVED		
9	N/C		
10	Y+ EXTERNAL	Input	Y external mirror position. High side of differential position input (from external quad or similar position sensor)
11	Y- EXTERNAL	Input	Y external mirror position. Low side of differential position input (from external quad or similar position sensor)
12	Y- COMMAND	Input	Y mirror position command. Low side of differential command input. Range +/-10 Volts.
13	Y+ COMMAND	Input	Y mirror position command. High side of differential command input. Range +/-10 Volts.
14	X POSITION	Output	X mirror angular position readout from local position sensor. (referenced to ground)
15	+5 VOLTS	Output	5 VDC for external loads of less than 100ma.
16	GND	Output	Ground Reference
17	X+ EXTERNAL	Input	X external mirror position Low side of differential position input (from external quad or similar position sensor)
18	RESERVED		
19	+15 VOLTS	Output	+15 VDC for external loads of less than 100ma.
20	GND	Output	Ground Reference
21	RESERVED		
22	GND	Output	Ground Reference
23	Y POSITION	Output	Y mirror angular position readout from local position sensor. (referenced to ground)
24	Y ERROR	Output	Y summing junction error voltage output, difference between commanded and actual position. (referenced to ground)
25	RESERVED		

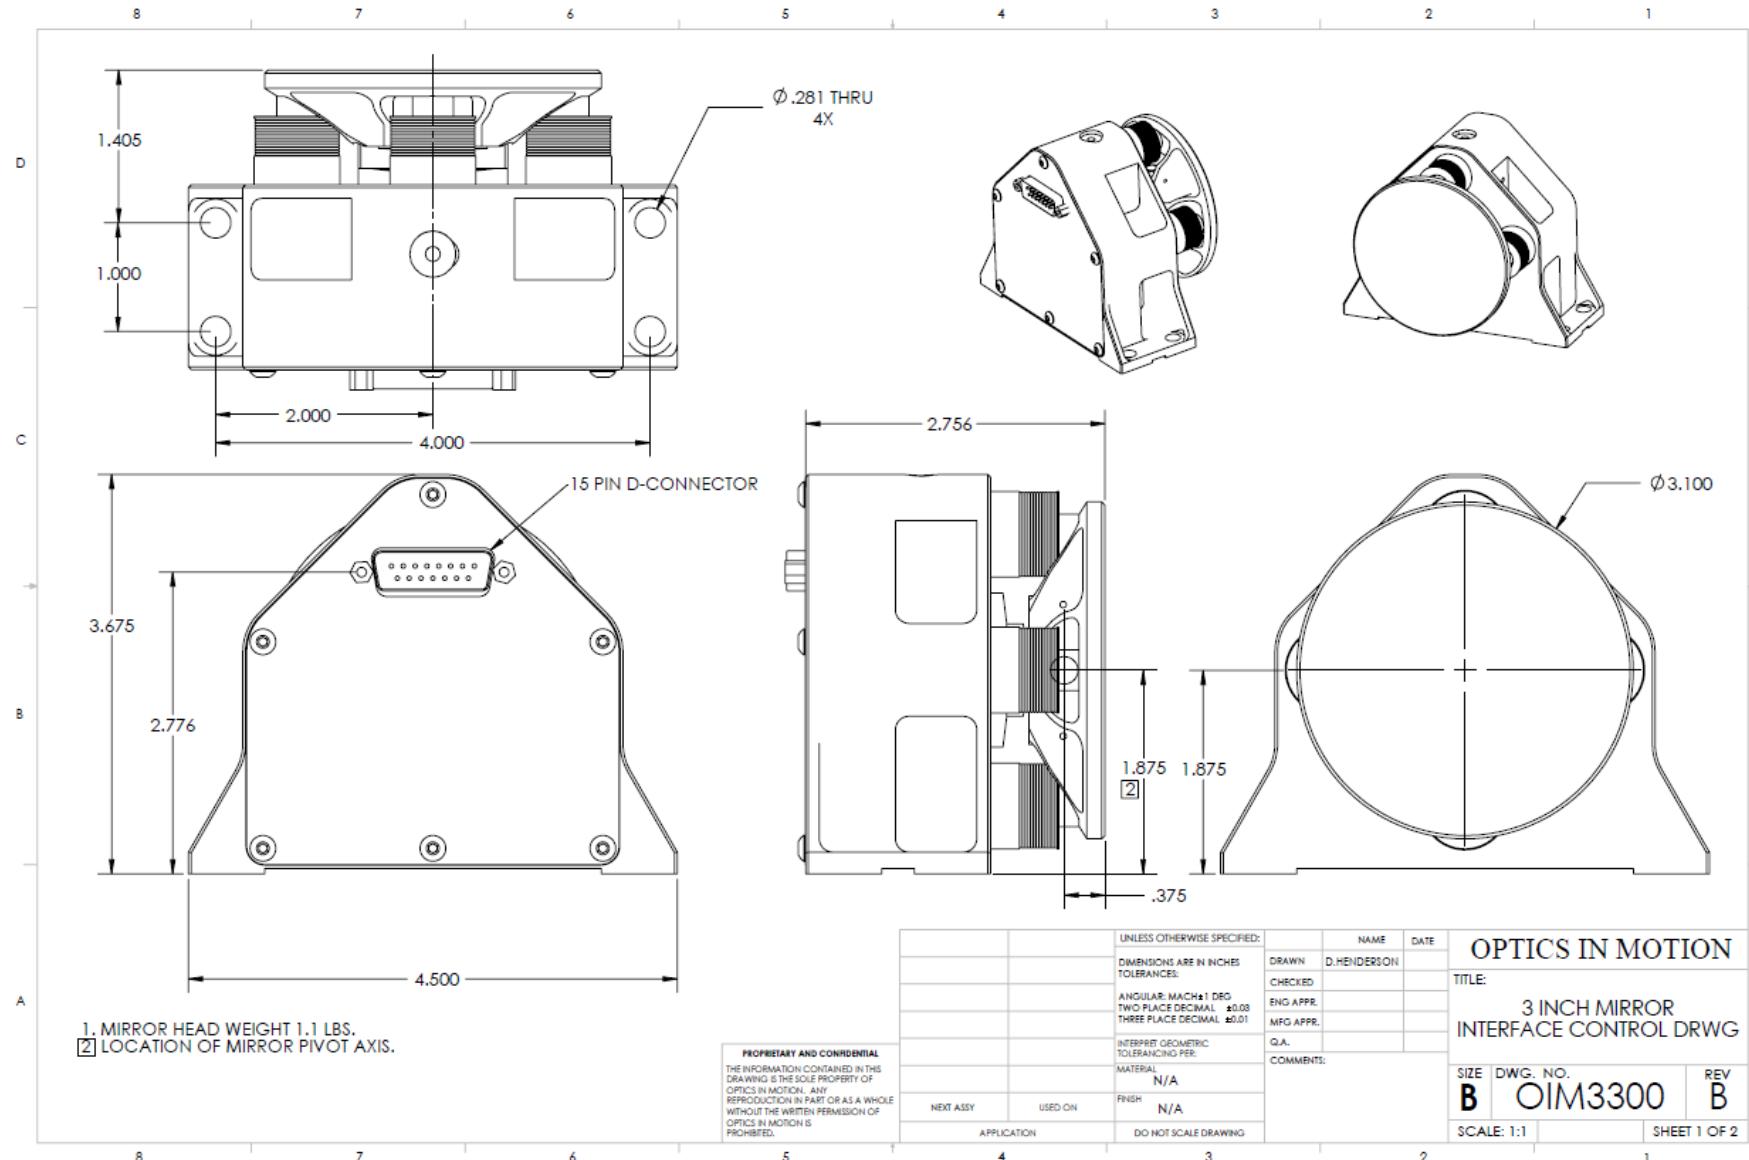

**Optics In Motion LLC, 4223 Rutgers Ave, Long Beach, CA 90808**  
(562) 481-7103, E-Mail: sales@opticsinmotion.net

